


# Model Railroad DCC accessory decoder.



This is board is a DCC accessory decoder. What can be controlled with it is dependent on the firmware used.

This document describes the operation of the board.

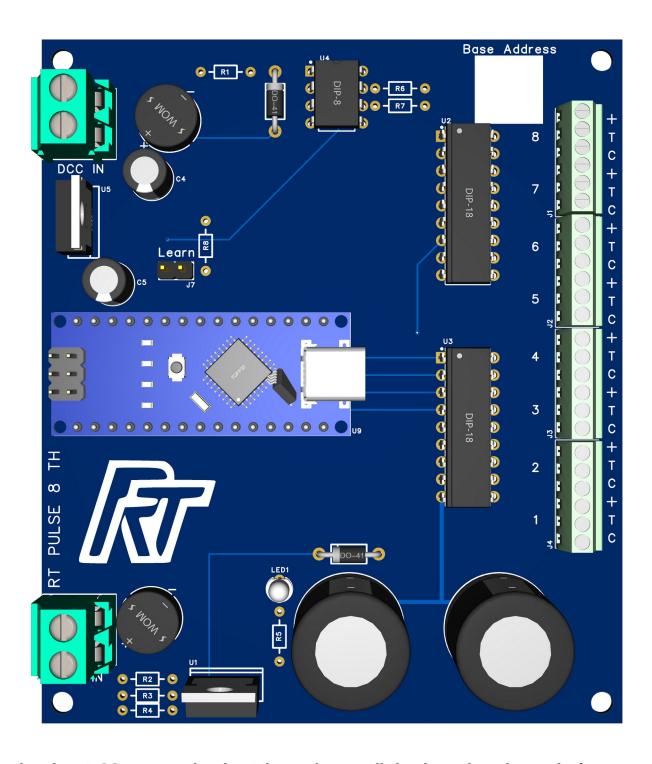

#### In use.

Using this firmware on github:

https://github.com/Rosscoetrain/DCC-Turnout-Decoder-Direct

The board will control dual solenoid turnouts such as the Marklin M track 5117, 5202, 5120, 5214, 5207 or 5128. It can also be used to control dual solenoid signals such as Marklin 7036, 7038, 7039, 7040 or 7041.

This decoder incorporates a capacitor discharge unit (CDU). The CDU provides current limiting protection for the solenoids.

The firmware currently needs to be uploaded twice to the Arduino Nano to ensure the eeprom on the board is setup correctly.

Please read the instructions in the ino file.

Open the firmware in the Arduino IDE.

Un-comment the line in the ino as described there. (Line 14 - 16)

Upload the firmware to the Arduino Nano.

On the serial monitor you should see: 11:48:31.374 -> Resetting CVs to Factory Defaults

Comment out the line in the ino file as described there. (Line 14-16)

Upload the firmware again to the Arduino Nano.

Using the serial monitor enter the following command.

<>

You will then see a response like this:

17:40:32.025 -> CVs are:

17:40:32.025 -> CV1 = 1

 $17:40:32.025 \rightarrow CV9 = 0$ 

 $17:40:32.025 \rightarrow CV2 = 75$ 

 $17:40:32.025 \rightarrow CV3 = 50$ 

17:40:32.025 -> CV4 = 1

All is now ready.

2 of 13




# Connection to the layout.

How you connect to your layout is really dependent on your setup.

This is a how to connect to a DCC-EX command station with separate power supply for the CDU.

The DCC track is connected to the DCC Input connector on the decoder.

The power supply can be 12 - 24V DC or 12 - 20V AC and is connected to the PWR IN connector on the decoder.

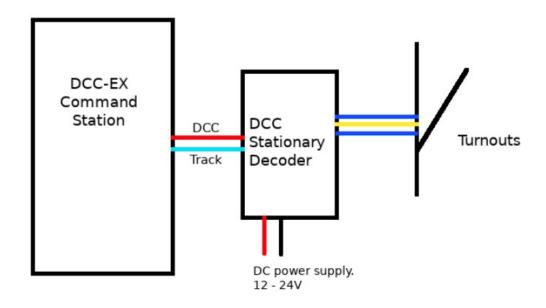



# **Connecting Turnouts**

The turnouts are connected as in the diagram below.

The wiring to the PCB is connected thus:


+ = Common

C = Close

T = Throw

The connectors are screw terminals which will accept wire between 20awg and 26awg.

If your turnouts don't change in the right direction for close and throw simply reverse the Close and Throw wire connections.

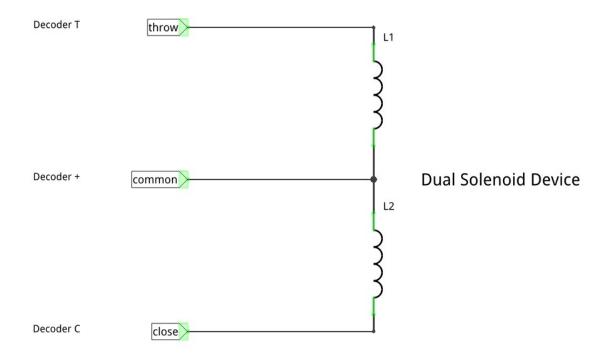



#### **Serial Commands**

Several commands are available via the Arduino serial monitor for configuring or displaying information on the decoder.

<?> Show available commands
<> Show current Control Variables
<A address> Change decoder base linear address

<P number> Set solenoid pulse duration in micro seconds = number \* 10

Normal setting for this is 20 - 30 (default 25 = 250uS)

<R number> Set CDU recharge time in micro seconds = number \* 10

default (30 = 300uS)

<S 1/0> Set the decoder active state 1 = High output 0 = Low output

<C address> Close a turnout at address <T address> Throw a turnout at address

<Z> Soft Reset

The address is the decoder linear address to use within the DCC command station. When you set an address it will display the correct base address to use for the decoder at the serial monitor. Eg will give a base address of 1 and the turnouts will be assigned addresses 1 - 8.

The default address is 1, you need to change this if using more than one stationary decoder on your layout. Once the address is set, this address and the next 8 are the addresses you use to control your turnouts. Eg, 1-8, 5-12.

Some examples using the serial monitor are:

<C 1> Close turnout at address 1 <T 2> Throw turnout at address 2

How you add them to your DCC Command Station will depend on the command station.

Base addresses are multiples of 4 + 1 eg, 1, 5, 9, 13, 17, ...

The address can be between 1 and 2037

In all cases the 8 turnouts will be addressed from the base address for the next 8 address eg, base address 1, addresses are 1, 2, 3, 4, 5, 6, 7, 8. base address 5 addresses are 5, 6, 7, 8, 9, 10, 11, 12.



# Learning Mode.

To set the address on the decoder in learning mode.

Connect the decoder to your DCC track via the DCC input connector. It's best not to have any solenoid devices connected at this point.

Put a jumper on the Learn header next to the Arduino nano.

The LED on the nano will flash three times to show it is in learning mode.

Send a throw or close command to the base address you want for the decoder.

Base addresses are multiples of 4 + 1. eg, 1, 5, 9, 13, 17, ...

The address can be between 1 and 2037.

Once the address is learnt remove the jumper from the Learn header.



### **Programming Track Setup.**

The CV's can be set with the decoder connected to a programming track.

Connect the decoder DCC IN to the programming track of your command station.

How you send a write command to the decoder CV will depend on your command station.

Eg Using a DCC-EX command station connected to an Arduino IDE serial monitor send the following command to change the address:

<W 1 address>

Use the table on the following pages to determine the correct value to use for address. The value in the column CV1 is the value to use in the above command. The value in the column base address will then be the base address for the decoder.

It is also possible to program the pulse length, CDU recharge time and active state.

#### Pulse length

<W 2 xxx> Where xxx is the time in milliseconds / 10 range 1 – 255 (default 25 = 250mS)

CDU recharge time

<W 3 xxx> Where xxx is the time in milliseconds / 10 range 1 – 255 (default 30 = 300mS)

Active state

 $\langle W | 4 \rangle \rangle$  Where x is 1 for High output state and 0 is Low output state (default 1)



# Address Table (CV9 = 0)

1	CV1	Base Address	CV1	Base Address	CV1	Base Address	CV1	Base Address
3       9       33       129       63       249       93       369         4       13       34       133       64       253       94       373         5       17       35       137       65       257       95       377         6       21       36       141       66       261       96       381         7       25       37       145       67       265       97       385         8       29       38       149       68       269       98       389         9       33       39       153       69       273       99       393         10       37       40       157       70       277       100       397         11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57		1	31	121	61	241	91	361
4       13       34       133       64       253       94       373         5       17       35       137       65       257       95       377         6       21       36       141       66       261       96       381         7       25       37       145       67       265       97       385         8       29       38       149       68       269       98       389         9       33       39       153       69       273       99       393         10       37       40       157       70       277       100       397         11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61 <td></td> <td>5</td> <td>32</td> <td>125</td> <td>62</td> <td>245</td> <td>92</td> <td>365</td>		5	32	125	62	245	92	365
5         17         35         137         65         257         95         37           6         21         36         141         66         261         96         381           7         25         37         145         67         265         97         385           8         29         38         149         68         269         98         389           9         33         39         153         69         273         99         393           10         37         40         157         70         277         100         397           11         41         41         161         71         281         101         401           12         45         42         165         72         285         102         405           13         49         43         169         73         289         103         409           14         53         44         173         74         293         104         413           15         57         45         177         75         297         105         417           16         6		9	33	129	63	249	93	369
6       21       36       141       66       261       96       381         7       25       37       145       67       265       97       385         8       29       38       149       68       269       98       389         9       33       39       153       69       273       99       393         10       37       40       157       70       277       100       397         11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       6		13	34	133	64	253	94	373
7       25       37       145       67       265       97       385         8       29       38       149       68       269       98       389         9       33       39       153       69       273       99       393         10       37       40       157       70       277       100       397         11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19 <td< td=""><td></td><td>17</td><td>35</td><td>137</td><td>65</td><td>257</td><td>95</td><td>377</td></td<>		17	35	137	65	257	95	377
8       29       38       149       68       269       98       389         9       33       39       153       69       273       99       393         10       37       40       157       70       277       100       397         11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       <		21	36	141	66	261	96	381
9       33       39       153       69       273       99       393         10       37       40       157       70       277       100       397         11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       441         22		25	37	145	67	265	97	385
10       37       40       157       70       277       100       397         11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22		29	38	149	68	269	98	389
11       41       41       161       71       281       101       401         12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23		33	39	153	69	273	99	393
12       45       42       165       72       285       102       405         13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24	)	37	40	157	70	277	100	397
13       49       43       169       73       289       103       409         14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25	L	41	41	161	71	281	101	401
14       53       44       173       74       293       104       413         15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       49         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26	2	45	42	165	72	285	102	405
15       57       45       177       75       297       105       417         16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27	3	49	43	169	73	289	103	409
16       61       46       181       76       301       106       421         17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28	1	53	44	173	74	293	104	413
17       65       47       185       77       305       107       425         18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29	<del>,</del>	57	45	177	75	297	105	417
18       69       48       189       78       309       108       429         19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	5	61	46	181	76	301	106	421
19       73       49       193       79       313       109       433         20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	7	65	47	185	77	305	107	425
20       77       50       197       80       317       110       437         21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	3	69	48	189	78	309	108	429
21       81       51       201       81       321       111       441         22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	)	73	49	193	79	313	109	433
22       85       52       205       82       325       112       445         23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	)	77	50	197	80	317	110	437
23       89       53       209       83       329       113       449         24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	L	81	51	201	81	321	111	441
24       93       54       213       84       333       114       453         25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	2	85	52	205	82	325	112	445
25       97       55       217       85       337       115       457         26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	3	89	53	209	83	329	113	449
26       101       56       221       86       341       116       461         27       105       57       225       87       345       117       465         28       109       58       229       88       349       118       469         29       113       59       233       89       353       119       473	1	93	54	213	84	333	114	453
27     105     57     225     87     345     117     465       28     109     58     229     88     349     118     469       29     113     59     233     89     353     119     473	5	97	55	217	85	337	115	457
28     109     58     229     88     349     118     469       29     113     59     233     89     353     119     473	5	101	56	221	86	341	116	461
29     113     59     233     89     353     119     473	7	105	57	225	87	345	117	465
	3	109	58	229	88	349	118	469
30 117 60 237 90 357 120 477	)	113	59	233	89	353	119	473
	)	117	60	237	90	357	120	477



151 152 153 154 155 156 157 158	Base Address 601 605 609 613 617 621	181 182 183 184 185	Base Address 721 725 729 733 737	211 212 213 214	<b>Base Address</b> 841  845  849
152 153 154 155 156 157 158	605 609 613 617 621	182 183 184 185	725 729 733	<ul><li>212</li><li>213</li></ul>	845 849
152 153 154 155 156 157 158	605 609 613 617 621	182 183 184 185	725 729 733	<ul><li>212</li><li>213</li></ul>	845 849
153 154 155 156 157 158	609 613 617 621	183 184 185	729 733	213	849
154 155 156 157 158	613 617 621	184 185	733		
155 156 157 158	617 621	185			853
156 157 158	621			215	857
157 158	CDE	186	741	216	861
158	625	187	745	217	865
	629	188	749	218	869
159	633	189	753	219	873
160	637	190	757	220	877
161	641	191	761	221	881
162	645	192	765	222	885
163	649	193	769	223	889
164	653	194	773	224	893
165	657	195	777	225	897
166	661	196	781	226	901
167	665	197	785	227	905
168	669	198	789	228	909
169	673	199	793	229	913
170	677	200	797	230	917
171	681	201	801	231	921
172	685	202	805	232	925
173	689	203	809	233	929
174	693	204	813	234	933
175	697	205	817	235	937
176	701	206	821	236	941
177	705	207	825	237	945
178	709	208	829	238	949
	713	209	833	239	953
179	717	210	837	240	957
	171 172 173 174 175 176 177	171       681         172       685         173       689         174       693         175       697         176       701         177       705         178       709         179       713	171       681       201         172       685       202         173       689       203         174       693       204         175       697       205         176       701       206         177       705       207         178       709       208         179       713       209	171       681       201       801         172       685       202       805         173       689       203       809         174       693       204       813         175       697       205       817         176       701       206       821         177       705       207       825         178       709       208       829         179       713       209       833	171       681       201       801       231         172       685       202       805       232         173       689       203       809       233         174       693       204       813       234         175       697       205       817       235         176       701       206       821       236         177       705       207       825       237         178       709       208       829       238         179       713       209       833       239



CV1	Base Address	CV1	Base Address	CV1	Base Address	CV1	Base Address
241	961	246	981	251	1001		
242	965	247	985	252	1005		
243	969	248	989	253	1009		
244	973	249	993	254	1013		
245	977	250	997	255	1017		

For addresses above 1017 set CV9 = 1 and CV1 = 0 to 255 and add 1024 to the base address above.

Eg. for base address 1021 - CV9 = 1 and CV1 = 0, for base address 1024 CV9 = 1 and CV1 = 1

For CV9 = 0, the base address can be calculated by the following:

base address = (CV1 - 1) \* 4 + 1

The CV1 value can be calculated by the following:

CV1 = (base address - 1) / 4 + 1




#### **Other Uses**

#### Lighting accessory decoder.

The firmware here can be used to control lights with different effects.

#### https://github.com/Rosscoetrain/RT\_Light-Decoder

An example of connecting leds to the decoder board is:

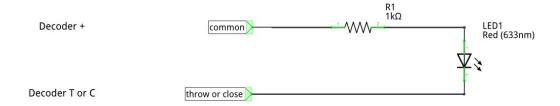

Each channel can provide upto 500mA of power. Resistor R1 will depend on the number of leds and the input voltage.

Controlling the lighting is then a matter of sending a DCC close or throw command to the applicable address.

The address will depend on how you program the CVs for the firmware.

The default settings are:

Light Mode	<b>Board Connection</b>	DCC Address
On/Off	1 T	1
Oneshot	1 C	2
Flash	2 T	3
Fade Flash	2 C	4
Alternate Flash pin 1	3 T	5
Alternate Flash pin 2	3 C	
Double Strobe	4 T	6
On/Off	4 C - 8 T	7 – 16

Please see the documentation associated with the firmware for more details.



# Addendum



### References.

PCB on pcbway.com:

https://www.pcbway.com/project/shareproject/RT DCC Pulse 8 Turnout Decoder with capacitor discharge unit 26697a2a.html

Dual solenoid accessory decoder firmware:

https://github.com/Rosscoetrain/RT-Hardware/tree/master/RT Pulse 8 decoder

Lighting accessory decoder firmware:

https://github.com/Rosscoetrain/RT\_Light-Decoder